



planefinder

Welcome

Thank you for sharing your ADS-B data with Plane Finder.

We know how much time and energy goes into creating a reliable ADS-B feed and very much appreciate the contributions of all who share with us.

To get the most from Plane Finder we highly recommend that you use our Plane Finder client for Windows.

Using the Plane Finder client will ensure optimal data quality. You'll also get some pretty neat stats, maps and more!

Please don't forget to ask us for free apps for iPad, iPhone and/or Android!

Supported Receivers & Windows Versions

We support the following Receivers:

- Kinetic Avionics Puck, SBS3, SBS1er and SBS1 - USB and Network
- Mode-S Beast - USB and Network
- DVB-T / RTL dongles - USB and Network (With RTL1090 or similar)
- AVR compatible receivers - USB/Serial and Network
- AirNav Radarbox - USB and Network
- Radarcape - (Not recommend as ideally use the native Radarcape client instead)
- Probably more! Let us know if yours isn't on the list.

We support the following version of Windows

- Windows Vista, Windows 7, Windows 8 and Windows 10
- Windows Server 2008 or later

Installation Requirements:

Installation is very simple. You will need to know:

- The output port of your receiver software – BaseStation, PlanePlotter, RTL1090 etc.
- The IP address of your receiver if using a network option

We also recommend that you also create a Plane Finder account for enhanced stats and advertising free access to planefinder.net. You can do this here: <https://planefinder.net/sharing/>

Note: Please use your share code only once per receiver. For installations with more than one receiver simply run multiple client instances - each with their own unique share code.

Ports & Data Quality

It is important to note that not all ports and software are created equal.

We also strongly recommend that you use RAW data as the input to Plane Finder wherever possible. **Basestation for example outputs RAW data on port 30006.**

Please **do not use port 30003** unless you have no other option available (Port 30003 is only a subset of the original ADS-B data).

There are a lot of software tools out there too. Most of these do a great job but sometimes we see settings and options that manipulate or change data in unforeseen or unpredictable ways!

If you are seeing problems with the data in your receiver software please resolve before sharing with Plane Finder. If in doubt please check our forum at <http://forum.planefinder.net> or contact us via support@pinkfroot.com

Installation & Configuration

To install the Windows client download and run the installation file from the Windows tab at: <https://planefinder.net/sharing/client>

Just follow the instructions to install the software. *Note - Windows Firewall may jump in and ask you to allow the installation.*

Once the software is installed: On a PC browser visit <http://127.0.0.1:30053> to configure the client (127.0.0.1 is the local host IP address of your PC).

You should see this:



To share your receiver data with Plane Finder you'll need to create a sharecode. If you already have a sharecode that you'd like to use, please [click here](#). If not, simply fill out the form below and we'll generate one for you!

Email address

Receiver Lat

Receiver Lon

[I already have a sharecode!](#)

Simply fill in the boxes.

(Latitude and Longitude if entered manually need to be Digital Decimal format i.e. 48.858289, 2.294562).

Once done select “Create a new sharecode”. The code will also be emailed to you.

Note - You cannot re-use your old sharecode/password from old Plane Finder clients with this new one.

You can add your new sharecode to your account on <https://planefinder.net/sharing/>

Note – if re-visiting the configuration of an existing installation select “I already have a sharecode” and enter the sharecode received originally via email.

The only step left is to tell our client about your receiver. In the instance below BaseStation is running on the same PC with an SBS receiver.

Receiver data format

Beast **Kinetic** 30003 (Basestation) AVR (TCP) Radarbox Radarcape

How are you connecting to your receiver?

Network Serial

IP address
127.0.0.1

Port number
30006

Complete configuration

Click “Complete configuration” when done

You should then see tabs in the browser for Map View, Data View, Log Viewer Stats and Settings.

We think that these are pretty cool and hope that you agree.





Your New Plane Finder client icon should look like this. The app can be found in your taskbar and should run automatically.

Stats & Receiver Performance


We’ve also included local and web tools to help you get the most from your receiver.

Here’s a quick screenshot of a stats page: (127.0.0.1:30053)

Client start date	Fri Apr 10 2015 11:38:09 GMT+0100 (BST)
Client version	3.0.347
Client uptime	00:35:43
Total Mode-S packets received over the last 24 hours	853,167 (0 previously)
Total data sent to Plane Finder over the last 24 hours	1,142.211kb (0kb previously)

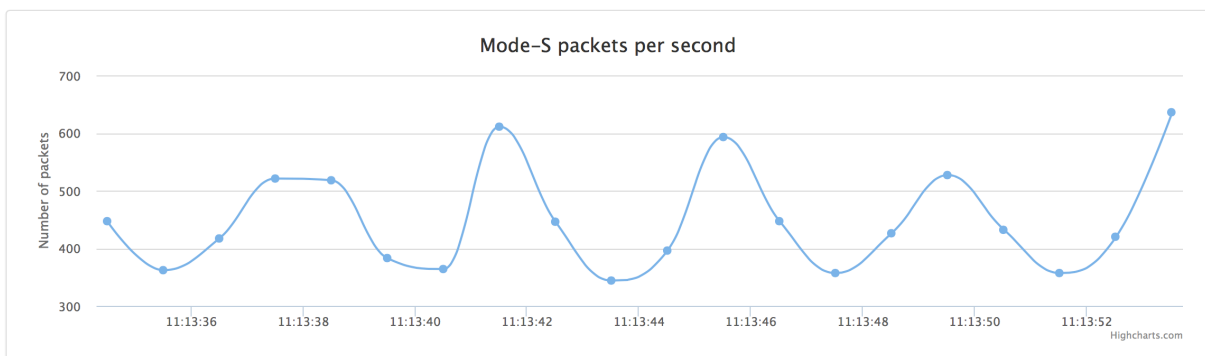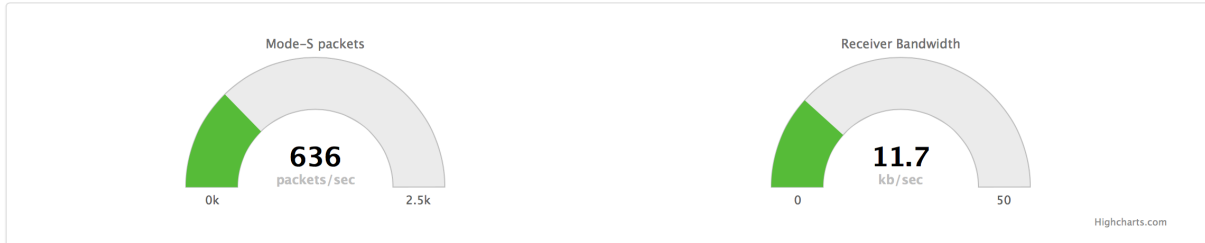

Mode-S packet type	Total received
0	190,408
4	98,254
5	27,241
11	274,636
16	14,051
17	100,537
20	105,645
21	42,395

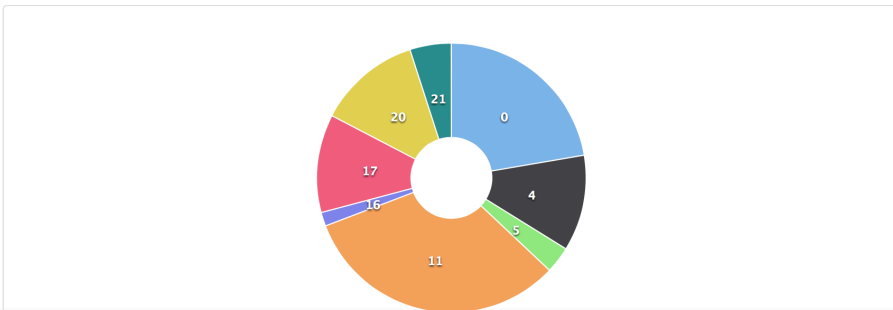

or see <https://planefinder.net/sharing/> for a polar diagram and more. Don't forget to assign your receiver to your account to view the private data page.

Feedback & Support

If the client is not working it is worth checking the ports entered and the event log. We might ask you to send the logs to us to help with troubleshooting.

If you have any questions or feedback for us please use our forum at <http://forum.planefinder.net> or contact us via support@pinkfroot.com

Don't forget to ask us for free apps if you can use them!

Thank you for sharing your data with Plane Finder.